



How to prepare your parts? (Red dimensions)

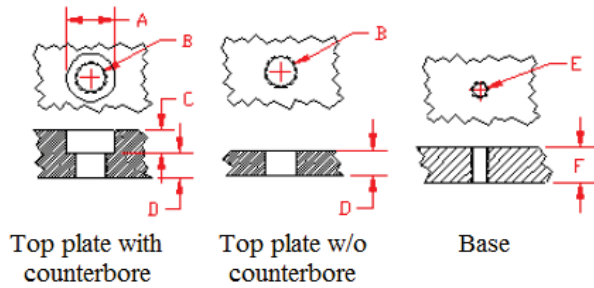

PART NO	CONFIGUR.	Stroke	A	B=Q	C	D=T	E	Fmin	G	H	I	J
HD001050	2.0-4-7-8	0.8	7.3	M4/.7	3.1	3.4	2.0-4	3	2.3	4.2	7.0	1.6
HD001051	2.0-4-7-1.6	1.6	7.3	M4/.7	3.1	4.2	2.0-4	4.2	2.3	4.2	7.0	1.6
HD001052	2.0-4-.35-8	0.8	7.3	M4/.35	3.1	3.4	2.0-4	3	2.3	4.2	7.0	1.6
HD001053	2.0-4-.35-1.6	1.6	7.3	M4/.35	3.1	4.2	2.0-4	4.2	2.3	4.2	7.0	1.6
HD001054	3.0-5-7-1.0	1.0	10.3	M6/.75	4.3	3.9	3.0-5	4.3	3.2	5.8	10	1.6
HD001055	3.0-5-7-2.0	2.0	10.3	M6/.75	4.3	4.9	3.0-5	5.3	3.2	5.8	10	1.6
HD001056	3.0-5-.35-1.0	1.0	10.3	M6/.35	4.3	3.9	3.0-5	4.3	3.2	5.8	10	1.6
HD001057	3.0-5-.35-2.0	2.0	10.3	M6/.35	4.3	4.9	3.0-5	5.3	3.2	5.8	10	1.6
HD001058	3.5-6-1.0-1.1	1.1	11.8	M7/1.0	4.9	5.1	3.5-6	5.1	3.8	6.6	11.5	1.8
HD001059	3.5-6-1.0-2.2	2.2	11.8	M7/1.0	4.9	6.2	3.5-6	5.9	3.8	6.6	11.5	1.8
HD001060	3.5-6-.75-1.1	1.1	11.8	M7/.75	4.9	5.1	3.5-6	5.1	3.8	6.6	11.5	1.8
HD001061	3.5-6-.75-2.2	2.2	11.8	M7/.75	4.9	6.2	3.5-6	5.9	3.8	6.6	11.5	1.8

PART NO	K	L	M	N	O	P	R1	R2	S	U	V	W	Tool
HD001050	2.8	1.5	2.0	1.6	3.2	0.7 - 0.05	45	0.13	1.6	0.8 + 0.05	2.0-.4x8	1.5	TL001050
HD001051	2.8	1.5	2.0	2.4	3.2	0.7 - 0.05	45	0.13	2.4	0.8 + 0.05	2.0-.4x10	1.5	
HD001052	2.8	1.5	2.0	1.6	3.2	0.7 - 0.05	45	0.13	1.6	0.8 + 0.05	2.0-.4x8	1.5	
HD001053	2.8	1.5	2.0	2.4	3.2	0.7 - 0.05	45	0.13	2.4	0.8 + 0.05	2.0-.4x10	1.5	
HD001054	4.0	1.8	3.0	1.8	4.9	1.0	60	0.18	1.8	1.2	3.0-.5x10	2.5	TL001054
HD001055	4.0	1.8	3.0	2.8	4.9	1.0	60	0.18	2.8	1.2	3.0-.5x12	2.5	
HD001056	4.0	1.8	3.0	1.8	4.9	1.0	60	0.18	1.8	1.2	3.0-.5x10	2.5	
HD001057	4.0	1.8	3.0	2.8	4.9	1.0	60	0.18	2.8	1.2	3.0-.5x12	2.5	
HD001058	4.6	2.0	3.5	1.9	5.8	1.3	70	0.2	1.9	1.57	3.5-.6x12	3.0	TL001058
HD001059	4.6	2.0	3.5	3.0	5.8	1.3	70	0.2	3.0	1.57	3.5-.6x14	3.0	
HD001060	4.6	2.0	3.5	1.9	5.8	1.3	70	0.2	1.9	1.57	3.5-.6x12	3.0	
HD001061	4.6	2.0	3.5	3.0	5.8	1.3	70	0.2	3.0	1.57	3.5-.6x14	3.0	

Dimensions of the features of components of standard AFAB Kits

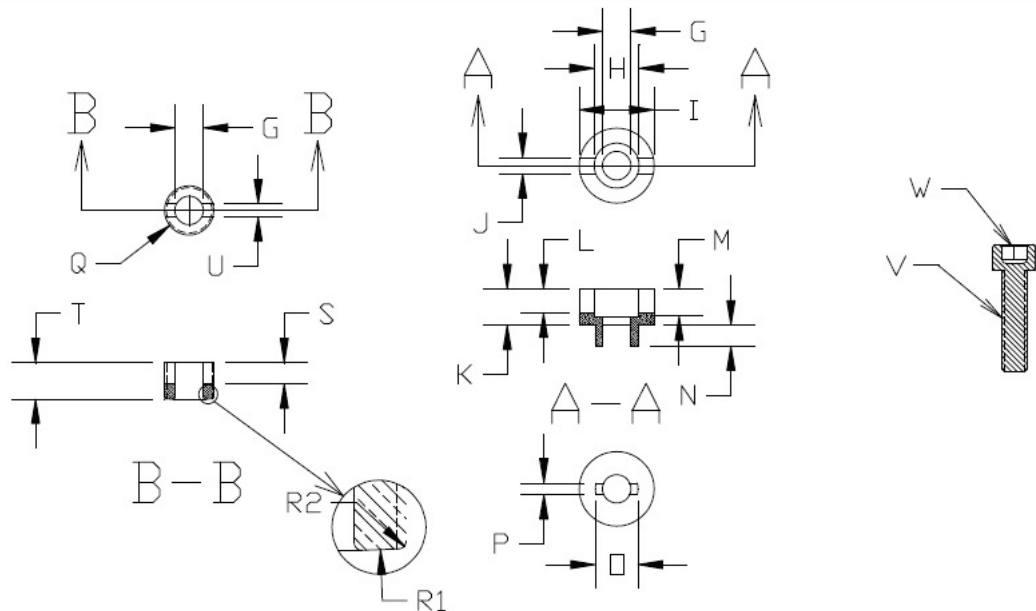

Press: Alt/← - to "Exit"