



How to prepare your parts? (Red dimensions)

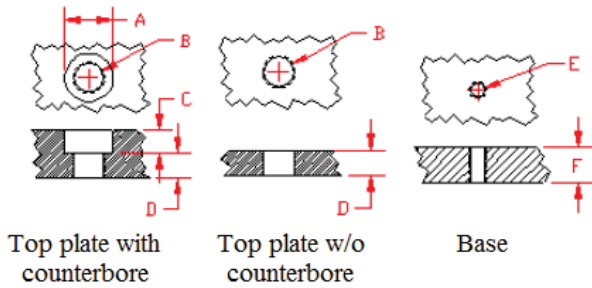

PART NO	CONFIGUR.	Stroke	A	B=Q	C	D=T	E	Fmin	G	H	I	J
HD001062	4.0-7-1.0-1.3	1.3	13.3	M8/1.0	5.6	5.3	4.0-7	6.6	4.3	7.3	13	2.0
HD001063	4.0-7-1.0-2.6	2.6	13.3	M8/1.0	5.6	6.6	4.0-7	7.3	4.3	7.3	13	2.0
HD001064	4.0-7-75-1.3	1.3	13.3	M8/.75	5.6	5.3	4.0-7	6.6	4.3	7.3	13	2.0
HD001065	4.0-7-75-2.6	2.6	13.3	M8/.75	5.6	6.6	4.0-7	7.3	4.3	7.3	13	2.0
HD001066	5.0-8-1.25-1.5	1.5	16.3	M10/1.25	6.7	6.5	5.0-8	7.1	5.35	8.85	16	2.4
HD001067	5.0-8-1.25-3.0	3.0	16.3	M10/1.25	6.7	8.0	5.0-8	7.6	5.35	8.85	16	2.4
HD001068	5.0-8-75-1.5	1.5	16.3	M10/.75	6.7	6.5	5.0-8	7.1	5.35	8.85	16	2.4
HD001069	5.0-8-75-3.0	3.0	16.3	M10/.75	6.7	8.0	5.0-8	7.6	5.35	8.85	16	2.4
HD001070	6.0-1.0-1.25-2.0	2.0	17.1	M11/1.25	7.8	7.0	6.0-1.0	6.5	6.4	10.4	16.5	2.8
HD001071	6.0-1.0-1.25-4.0	4.0	17.1	M11/1.25	7.8	9.0	6.0-1.0	8.5	6.4	10.4	16.5	2.8
HD001072	6.0-1.0-75-2.0	2.0	17.1	M11/.75	7.8	7.0	6.0-1.0	6.5	6.4	10.4	16.5	2.8
HD001073	6.0-1.0-75-4.0	4.0	17.1	M11/.75	7.8	9.0	6.0-1.0	8.5	6.4	10.4	16.5	2.8

PART NO	K	L	M	N	O	P	R1	R2	S	U	V	W	Tool
HD001062	5.3	2.3	4.0	2.1	6.6	1.7	85	0.25	2.1	1.97	4.0-7/14	3.0	TL001062
HD001063	5.3	2.3	4.0	3.4	6.6	1.7	85	0.25	3.4	1.97	4.0-7/16	3.0	
HD001064	5.3	2.3	4.0	2.1	6.6	1.7	85	0.25	2.1	1.97	4.0-7/14	3.0	
HD001065	5.3	2.3	4.0	3.4	6.6	1.7	85	0.25	3.4	1.97	4.0-7/16	3.0	
HD001066	6.4	2.5	5.0	2.55	8.2	1.7	104	0.3	2.5	1.97	5.0-8/16	4.0	TL001066
HD001067	6.4	2.5	5.0	4.0	8.2	1.7	104	0.3	4.0	1.97	5.0-8/18	4.0	
HD001068	6.4	2.5	5.0	2.55	8.2	1.7	104	0.3	2.5	1.97	5.0-8/16	4.0	
HD001069	6.4	2.5	5.0	4.0	8.2	1.7	104	0.3	4.0	1.97	5.0-8/18	4.0	
HD001070	7.5	3.0	6.0	3.0	9.4	2.0	122	0.35	3.0	2.4	6.0-1.0/16	5.0	TL001070
HD001071	7.5	3.0	6.0	5.0	9.4	2.0	122	0.35	5.0	2.4	6.0-1.0/20	5.0	
HD001072	7.5	3.0	6.0	3.0	9.4	2.0	122	0.35	3.0	2.4	6.0-1.0/16	5.0	
HD001073	7.5	3.0	6.0	5.0	9.4	2.0	122	0.35	5.0	2.4	6.0-1.0/20	5.0	

Dimensions of the features of components of standard AFAB Kits

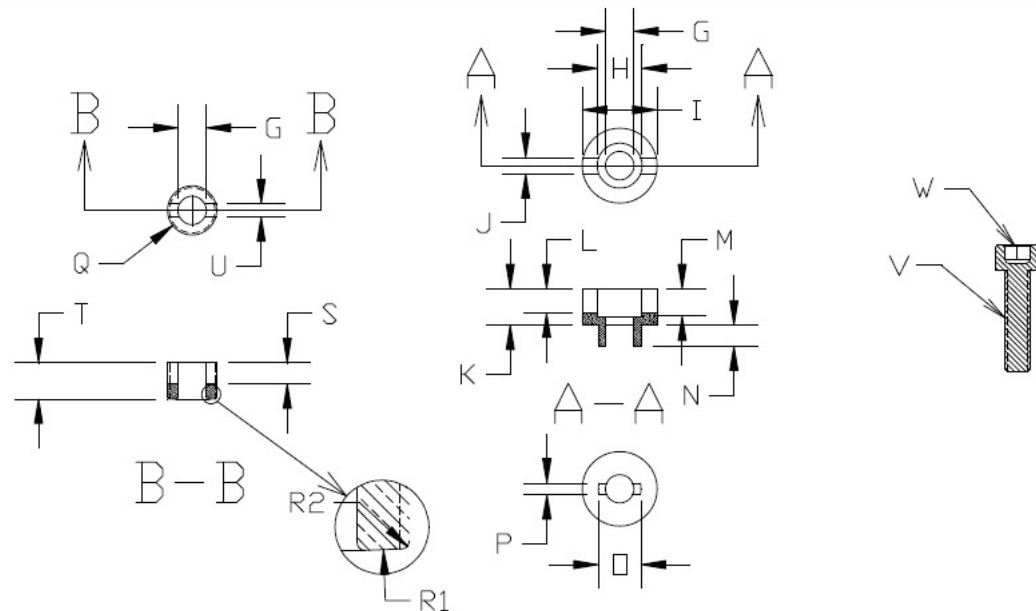

Press: Alt/← - to "Exit"